


Robimatic

Replacement Tap Top – Fitting Instructions

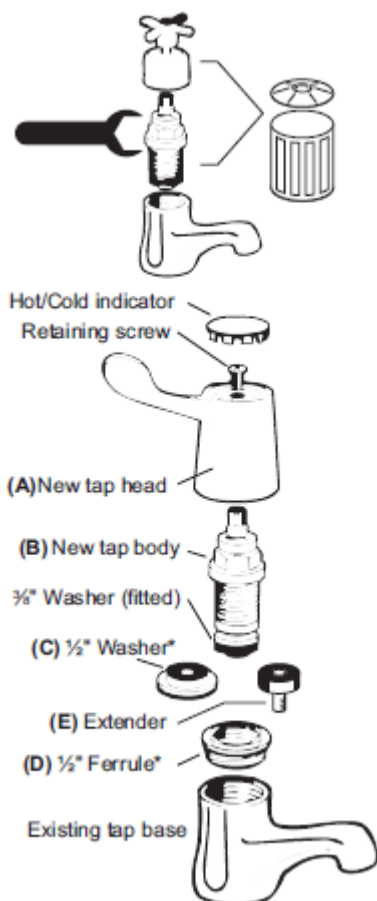

1. Turn off water heating system and water supply.
Drain taps and put plug in sink to prevent loss of parts.
2. Remove old tap head and valve body.
3. If new tap body (B) and tap washer fit correctly into tap shell, simply tighten slowly (DO NOT OVERTIGHTEN).
4. If new tap body does not fit, screw 1/2" ferrule* (D) on to new tap body, ensuring ferrule shoulder is uppermost.
5. Washer for 1/2" tap (C) may then be required*. Remove washer retaining nut, remove fitted washer, fit 1/2" washer (C), re-fit washer retaining nut in washer recess.
6. Fit new tap body into tap shell, tighten slowly (DO NOT OVERTIGHTEN).
7. Use tap extender (E) with appropriate washer for taps with deeper shells.
8. Reassemble tap head (A) on to tap body.
9. Turn tap on and off several times before reconnecting water supply.

**Not applicable to Kits TTDCV2 and TTDMCV2*